
 








 


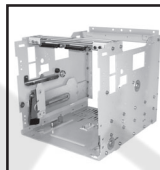 

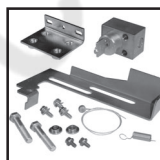 



Switchgear Components

Table 1. Switchgear Components

Item	Description	Current Cutler-Hammer Style Number
Overhead Lifter		
	Magnum Switchgear Overhead Lifter	8651C91G01
Breaker Lifting Yokes		
	Magnum DS Breaker Lifting Yoke-- (below 3200A)	8651C91G02
	Magnum DS Breaker Lifting Yoke-- (4000A - 6000A)	8651C91G04
Hand Crank		
	Hand Crank for Magnum Switchgear Overhead Lifter	8651C91G03
Magnum Breaker Lifter Rail Front		
	Magnum 22-inch (1 section) Magnum 44-inch (2 sections) Magnum 66-inch (3 sections) Magnum 88-inch (4 sections) Magnum 104-inch (5 sections)	MABMAFFGFF MABMAAGFF MABMAAGFF MABMAAGAF MABMAAGAA
Portable Lift Truck		
	Portable Lift Truck	6727D63H20
Trip Unit Test Kits		
	Magnum Trip Unit Test Kit with Adapter	8779C02G05
	Magnum Trip Unit Test Kit Adapter	8779C02G04

Switchgear Components

Table 1. Switchgear Components


Item	Description	Current Cutler-Hammer Style Number
Magnum Breaker Test Kit Handle		
	Magnum Test Kit Handle	5D28003G01
Magnum DS Breaker Test Cabinet		
	Breaker Test Cabinet 120V Breaker Test Cabinet 240V Breaker Test Cabinet w/ Capacitor Trip 120VAC Magnum DS Test Breaker Plug	9253C25G01 9253C25G02 9253C25G03 9253C25G04
Magnum Cassette Cell Switch Kit		
	Quantity (4) Form C Contacts w/ Mounting Shield	1B93090G01
	Quantity (8) Form C Contacts w/ Mounting Shield	1B93090G02
Magnum Switchgear Drawout Cassette		
	Magnum Switchgear Drawout Cassette 800A w/out secondary terminals	MABECBAG0D
	Magnum Switchgear Drawout Cassette 1600A w/out secondary terminals	MABECBAG0D
	Magnum Switchgear Drawout Cassette 2000A w/out secondary terminals	MABECBAG0D
Magnum Switchgear Cassette		
	Magnum Switchgear Cassette, 30-Point, Secondary Disconnect (Black A & B Blocks)	25A3643G01
Magnum Cassette Lock Provision		
	Magnum Cassette Lock Provision (Right Mount)	1B93091G01
	Magnum Cassette Lock Provision (Left Mount)	1B93091G02
Magnum Switchgear Magnetic Door Cover		
	Magnetic Door Cover (for hole in door when breaker is removed from cell)	9250C50G01
Magnum Switchgear Winged Handle Magnum Breaker Door		
	Magnum Switchgear Winged Handle Magnum Breaker Door w/ Lock & Key	1A85290G22
	Magnum Switchgear Winged Handle Magnum Breaker Door w/ Padlock Provision	1A85290G20

Motor Starter Components

 
Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------



Magnum Cell Compartment Heater

	Magnum Cell Compartment Heater 120v 95w/ 250v 250w	7497A69H04
---	---	------------





Magnum Switchgear Secondary Disconnect Terminal Block

	Magnum Switchgear Secondary Disconnect Terminal Block Assembly	25A3642G01
---	--	------------


Magnum Switchgear Cassette, 6-Point Secondary Terminal Block

	(A1-A6), includes wires	25A3644G01
	(A7-A12), includes wires	25A3644G02
	(A13-A15, B1-B3), includes wires for connecting to 30-point, stationary A-Block	25A3644G03
	(B4-B9), includes wires	25A3644G04
	(B10-B15), includes wires	25A3644G05
	(C1-C8), includes wires	25A3644G06
	(A16-A21), includes wires	25A3644G07
	(A22-A27), includes wires	25A3644G08
	(A28-A30, B16-B18), includes wires	25A3644G09
	(B19-B24), includes wires	25A3644G10
(B25-B30), includes wires	25A3644G11	
(C7-C12), includes wires	25A3644G12	
	Magnum Switchgear Cassette, QTY (2), 6-Point Secondary Terminal Blocks for Cell Switches (C1-C6 & C7-C12), wire not included	25A3645G01

Magnum Switchgear Terminal Blocks

	Terminal Block 6-Pole For Internal Wiring	2A97852H01
	Terminal Block 7-Pole For Internal Wiring	2A97853H01
	Terminal Block 3-Pole 50A (Male) Wire Terminations	2142A40H01
	Terminal Block 3-Pole 50A (Female) Wire Terminations	2142A40H02

Terminal Block Spacer

	Magnum Switchgear Cassette Secondary Disconnect Terminal Block Spacer QTY (12) included	9252C24H01
---	---	------------



Eaton Corporation
Cutler-Hammer business unit
1000 Cherrington Parkway
Moon Township, PA 15108-4312
USA
tel: 1-800-525-2000
www.cutler-hammer.eaton.com

Motor Starter Components


Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------


CT Shorting Blocks

	CT Shorting Block 4-Pole	2A97854H01
	CT Shorting Block 6-Pole	NUSC6


Breaker Control Switch

	120VAC/125VDC, Red-Green w/ common	2A96112H21
	240VAC/250VDC, R-G w/ common	2A86112H22
	48VDC, R-G w/ common	2A86112H23
	120VAC/125VDC, R-G w/out common	2A96112H25
	240VAC/250VDC, R-G w/out common	2A86112H26
	48VDC, R-G w/out common	2A86112H27
	120VAC/125VDC, Red-Green-Amber w/ common	2A96112H31
	240VAC/250VDC, R-G-A w/ common	2A86112H32
48VDC Red-Green-Amber w/ common	2A86112H33	

3-Sensors, 1 Rating Plug in a kit Frame size up to 3200A

	Sensor & Rating Plug Amps 200A	2A11798G01
	Sensor & Rating Plug Amps 250A	2A11798G02
	Sensor & Rating Plug Amps 300A	2A11798G03
	Sensor & Rating Plug Amps 400A	2A11798G04
	Sensor & Rating Plug Amps 600A	2A11798G05
	Sensor & Rating Plug Amps 630A	2A11798G06
	Sensor & Rating Plug Amps 800A	2A11798G07
	Sensor & Rating Plug Amps 1000A	2A11798G08
	Sensor & Rating Plug Amps 1200A	2A11798G09
	Sensor & Rating Plug Amps 1250A	2A11798G10
	Sensor & Rating Plug Amps 1600A	2A11798G11
	Sensor & Rating Plug Amps 2000A	2A11798G12
	Sensor & Rating Plug Amps 2500A	2A11798G13
	Sensor & Rating Plug Amps 3000A	2A11798G14
Sensor & Rating Plug Amps 3200A	2A11798G15	

1-Neutral Current Sensor

	Required for Ground fault - 200A	9253C03H01
	Required for Ground fault - 250A	9253C03H02
	Required for Ground fault - 300A	9253C03H03
	Required for Ground fault - 400A	9253C03H04
	Required for Ground fault - 600A	9253C03H05
	Required for Ground fault - 630A	9253C03H14
	Required for Ground fault - 800A	9253C03H06
	Required for Ground fault - 1000A	9253C03H07
	Required for Ground fault - 1200A	9253C03H08
	Required for Ground fault - 1250A	9253C03H15
	Required for Ground fault - 1600A	9253C03H09
	Required for Ground fault - 2000A	9253C03H10
	Required for Ground fault - 2500A	9253C03H11
	Required for Ground fault - 3000A	9253C03H12
Required for Ground fault - 3200A	9253C03H13	

Note: For additional information, call 1-800-523-3775.